COLOR COMPARISON TEST LONG RANGE pH (3-11)

Instr. #5425


PROCEDURE:

CAREFULLY READ AND FOLLOW PRECAUTIONS ON REAGENT LABELS. KEEP REAGENTS AWAY FROM CHILDREN

NOTE: When dispensing reagents from dropper bottles, **always** hold bottle in a vertical position.

Long Range pH Test

- Rinse and fill 5 mL test cell (#9017) to 5 mL mark with water to be tested.
- 2. Add 5 drops R-1003U Long Range Indicator. Cap and mix.
- Place test cell flat along white area of Color Card Comparator/Instruction (#5425).
 Match color in test cell with a color standard. Record as pH units.

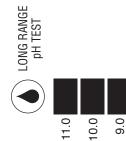







5.0



4.0

